

# **CARBON FIBER FAR INFRARED HEATER**

MODEL NO. CH-3040

## **Wall Mount Instructions**



**WEATHERWORKS, INC.**  
**DORAL, FL 33172**  
**1-866-369-4170**

**[www.weatherworks.net](http://www.weatherworks.net)**

**MADE IN CHINA**

# CARBON FIBER FAR INFRARED HEATER

## What's in the wall mount kit:

- 2 Brackets
- 8 cross screws (4 mm x 15mm)

## Tools needed:

- Cross screw driver
- Drill with 3mm pilot
- Level
- Measuring tape
- Pen or pencil
- 8 Expanders (optional)

## Caution:

When choosing the best place to install the heater, take into consideration that it must not be installed next to windows in order to avoid close contact to curtains or any easily flammable material. Although this is a very safe product, any extra precaution taken is always good. It's better to be safe than sorry.


Brackets supplied will keep heater at least 3 inches from the wall. Do not override this standard measure.

When heater is mounted on the wall, **DO NOT** cover it or hang absolutely nothing from it (coats, umbrellas, caps, towels, paper or plastic bags, magnet add on, sticky notes, stickers, we mean, **absolutely nothing!**).

## Instructions:

- First, select the appropriate height where you want to place the heater. We strongly recommend that you place the heater on a sheetrock or concrete wall.

- Using the mounting bracket as guide, mark with a pen where the screws will go from whichever bracket you choose left or right. Make sure bracket is leveled before you drill the holes.

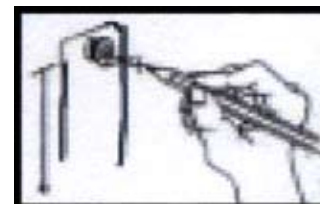

Bracket

- Drill the four holes and place expanders into each one of the holes. Next, put bracket into place and tighten all 4 screws. Proceed with next bracket, in the exact same way.



**IMPORTANT:** Make sure there is 24 Inches distance from outer side of brackets and also make sure they are leveled.

- If drilling on concrete wall, make sure you use the appropriate concrete pilot.
- Once you have brackets screwed in and secured, carefully snap heater into place by holding it on a 45° degree angle and slowly mount it into brackets until properly placed in perfect vertical position.

*(The heater has a tilt safety feature, which means that it must be in perfect vertical position, or else it will not work. Therefore our emphasis on this matter.)*

- **Heater must be unplugged from outlet.**

- Again, make sure heater is properly leveled. If it is not, make any appropriate corrections before proceeding.




Heater mount on the wall

- Next, follow the heater instructions before you turn it on.

**IMPORTANT: Always put safety first!**



**IMPORTANT:** Make sure there is 24 Inches distance from outer side of brackets and also make sure they are leveled.

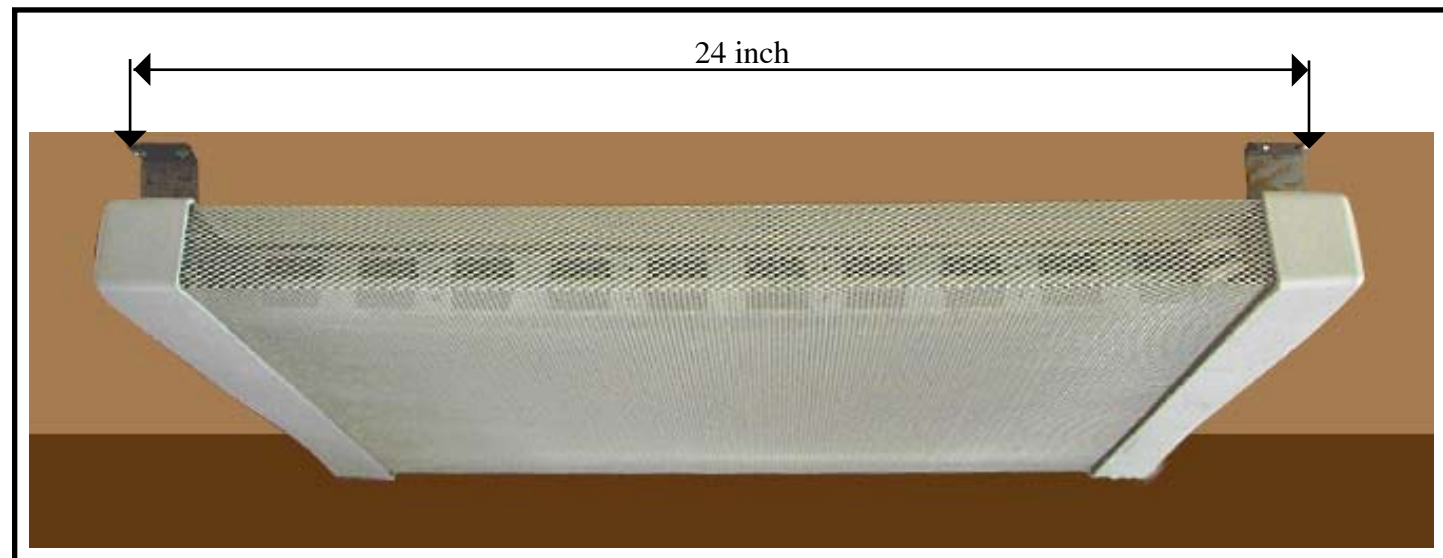

**WEATHERWORKS, INC.**

DORAL, FL 33172  
1-866-369-4170

[www.weatherworks.net](http://www.weatherworks.net)

**MADE IN CHINA**